



108 Carpenter Drive, Sterling, VA 20164 USA  
703-478-0700 · Fax 703-478-0815 · [www.eit.com](http://www.eit.com)

### SPOTCURE® UV INTENSITY METER

#### OPERATING INSTRUCTIONS

1. Select the properly sized adapter for the light guide and install it in the measurement head of the SPOTCURE® UV INTENSITY METER.
2. Grip the SPOTCURE® UV INTENSITY METER in the left hand and position with thumb on the "START" button.
3. Insert light guide into the light guide opening on the measurement head of the SPOTCURE® UV INTENSITY METER.
4. Press and hold the "START" button.
5. Open the shutter on the UV light source.
6. Release "START" button. After "START" button is released, the displayed UV intensity reading will be held for approximately 3 minutes or until the "START" button is pressed again.
7. Close the shutter on the UV light source.
8. Remove the light guide from the measurement head.

See reverse

#### MAINTENANCE and WARRANTY

If the light guide opening becomes dirty, it may be cleaned with a cotton swab moistened with isopropyl alcohol. After cleaning, dry the window with a clean cotton swab. EIT recommends that the SPOTCURE® UV INTENSITY METER be returned to EIT for calibration once every six months. The warranty period of the SPOTCURE® UV INTENSITY METER is 6 months from the date of purchase, except for abuse or neglect. There are no user serviceable parts inside this unit.

#### SHIP TO ADDRESS FOR CALIBRATION OR REPAIR

**EIT Instrument Markets**  
**22815 Glenn Drive, Ste 104**  
**Sterling, VA 20164 USA**

Telephone: 703-652-7332  
Fax: 703-652-7340

Web: [www.eit.com/instruments](http://www.eit.com/instruments)  
Refer to website for service request form.

**Instrument made in USA**

**100200.SPOT Rev D**